
<u>PUCH M125 FLYWHEEL HOLDER TOOL – For use with engine in frame</u>

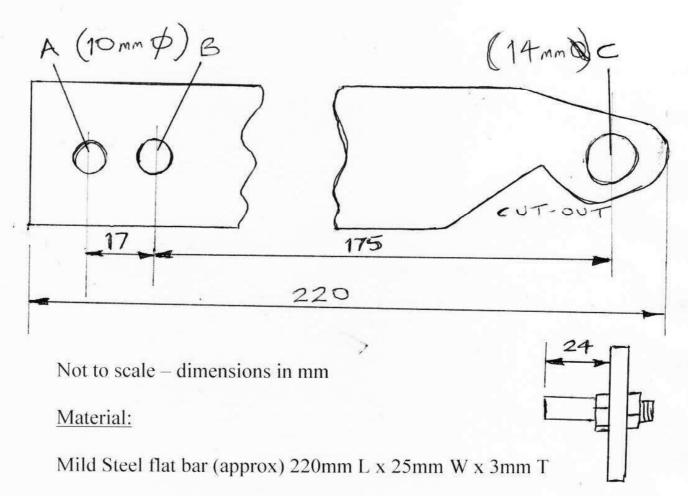

(I used a bar 35mm W x 5mm T which is really too heavy but was all I had to hand).

M10 Bolt x 1 (Cut to length)

M10 Thin Nut x 2

Spacer 5mm T x 14mm (or more) I.D. (Anything suitable will do, a nut or washers etc).

Two pin holes positions (A & B) are required to clear components within the flywheel. Cut-out is needed to clear silencer.